

Installation Instructions




In the package:
 1x cable extension
 2x "U" brackets
 4x screws
 1x tape base




Step 1:
 Insert a screwdriver into the hole and open the housing carefully.




Step 2:
 Lift the lid off.

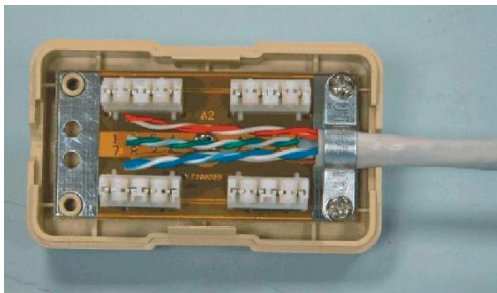

Step 3:
 Peel off the sheath of each cable about 3 cm and attach them to the cable housing one at a time.

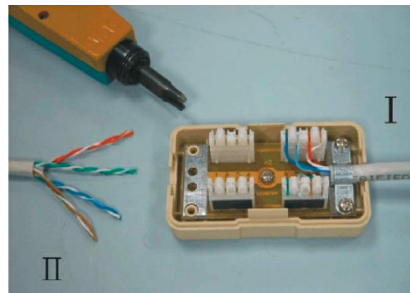

Step 4:
 Insert the cable wires in the correct positions according to the color codes (T568B).

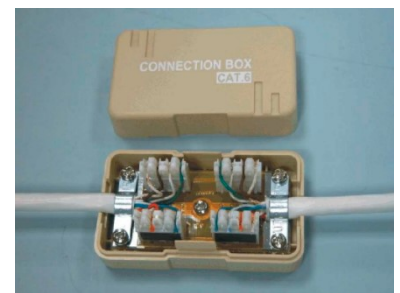

Step 5:
 Repeat step 4 with the second cable and close the lid with fingers.

